
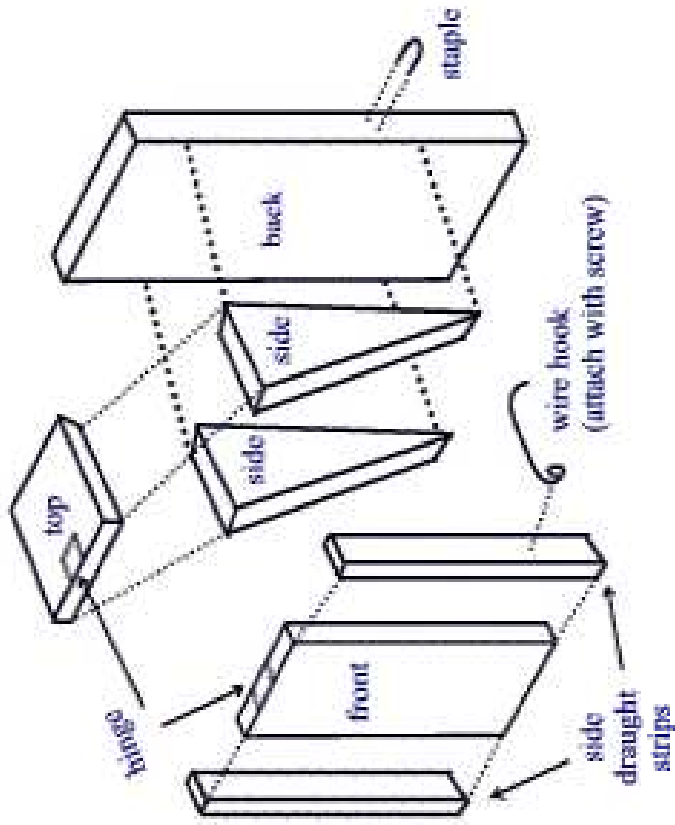


A "Wedge" made up with extra waterproofing

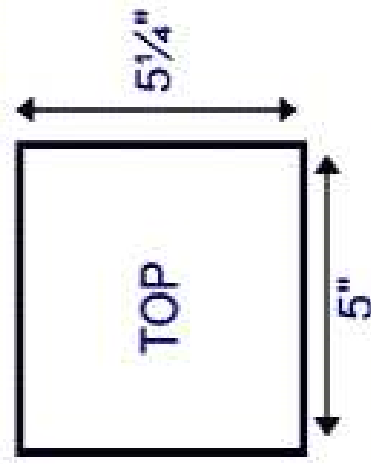

Use 3/4" rough cut wood that has had NO PRESERVATIVES applied to it. The rear edge of the TOP needs to be cut at an angle so that the TOP will fit flush against the BACK when fitted onto the SIDES. To attach the FRONT use a hinge and then staple some waterproof felt from the FRONT, over the BACK, and down the FRONT. The black lines on the BACK are grooves scored in the wood to help the bats crawl up into the box.

The Pete Maule Wedge